


# Installation Guide

## Cast Iron Wet Panel Lavatory

K-2817, K-2819

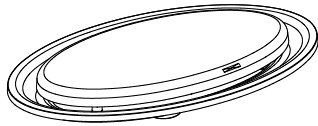

1020957-2-A

THE BOLD LOOK  
OF **KOHLER**®

## Thank You For Choosing Kohler Company

We appreciate your choosing The Bold Look of Kohler with your plumbingware selection. Please take a moment to review this manual before you start the installation. Contact us if you have any installation or performance problems. Our phone numbers and website are listed on the back cover. Thanks again for choosing Kohler Company.

## Recommended Tools and Materials




Plumbers Putty



Sealant




Scissors



Pencil



Tape Measure



Saber Saw



Drill




Claw Hammer

## Before You Begin

- This lavatory can be installed in either undercounter or tile-in installations. Follow the instructions that apply to your installation.
- Observe local plumbing codes.
- Prior to installation, unpack the new lavatory and inspect it for damage. Return the lavatory to its protective carton until you are ready to install it.
- Inspect the waste and supply tubing, and replace as needed.
- Failure to follow these precautions may result in a poor installation.**

## For Undercounter Installation

- Undercounter lavatories should be installed by experienced installers.
- Do not use adhesives or adhesive sealants with this product.
- Install so future removal from underneath the countertop is possible to avoid countertop damage.

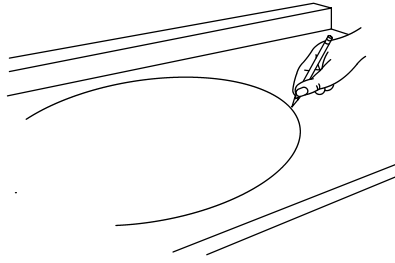


## 1. Undercounter Installation

**NOTE:** You may require different, more specialized tools to install this lavatory to countertop materials other than wood or wood composites.

**NOTE:** Install so future removal from underneath the countertop is possible while avoiding damage to the countertop.

- Check the desired lavatory location for clearance between the backsplash, faucet, lavatory, and cabinet.
- Cut out the template.
- Carefully position and trace the template on the countertop as directed on the template.
- Mark the faucet hole centerline on the countertop.
- Drill a 1/2" pilot hole on the inside of the cut line.
- Cut out the countertop opening with a saber or keyhole saw.

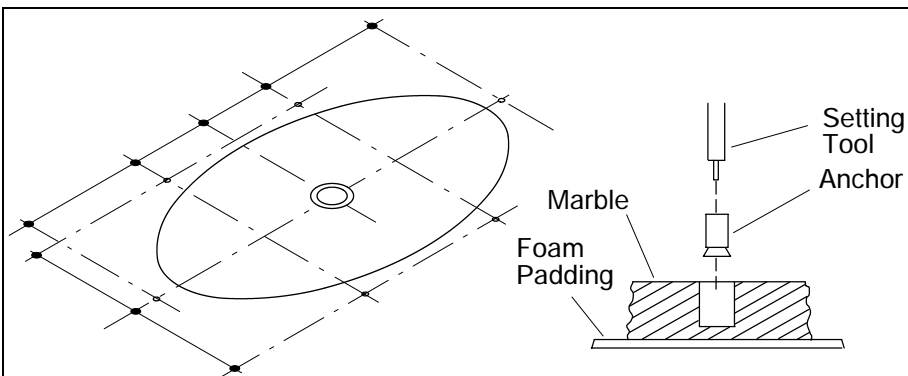


### For Wood Countertops

- Mark and pre-drill the wood screw holes at the locations shown on the template.
- Waterproof any exposed areas of wood.

### For Marble/Stone Countertops


**NOTE:** The screws provided should be used on countertops with a minimum 1" (2.5cm) thickness. For thinner countertops, use appropriate anchors and fasteners.

- Position the countertop upside down on foam padding to protect the surface. Mark and drill  $3/8$ " holes  $5/8$ " (1.6cm) deep at the locations shown on the template.
- Use a setting tool and hammer to secure the anchors.

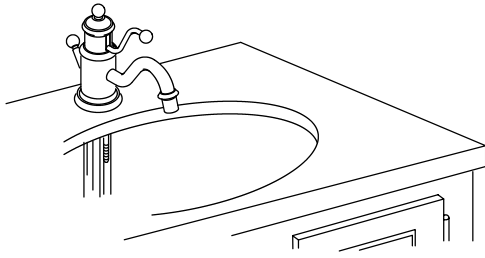

## For All Installations

- If the countertop has not been installed, install it at this time.
- Drill the faucet holes according to the faucet installation instructions.
- Install the faucet to the countertop according to the faucet manufacturer's instructions.
- Install the drain to the lavatory according to the drain manufacturer's instructions.

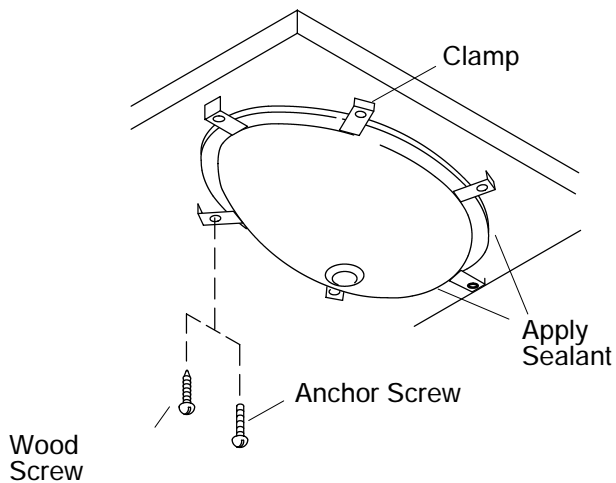


**NOTE:** Do not use adhesives or adhesive sealants to hold the basin to the countertop. Use the clamps and screws provided.

- Apply a continuous bead of quality sealant to the top surface of the lavatory rim where it will contact the countertop.

**NOTE:** The screws provided should be used on countertops with a minimum 1" (2.5cm) thickness. For thinner countertops, use appropriate anchors and fasteners.

**⚠ CAUTION: Risk of personal injury or product damage.**  
Lavatories are very heavy. Get help lifting the lavatory.

- For wood, wood composite, and marble countertops, install the lavatory to the countertop with the clamps and screws provided. For other countertop materials, refer to the countertop manufacturer's instructions for recommended fasteners.
- Position the lavatory squarely under the cutout before tightening the clamps. Draw the lavatory rim up against the countertop until it is snug. **Do not overtighten.**
- Immediately wipe away any excess sealant.

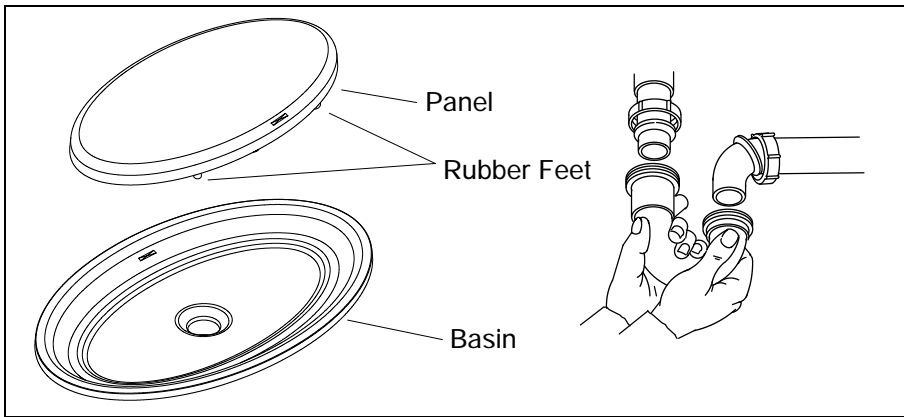

**⚠ WARNING: Risk of product damage.** To prevent damaging the basin the rubber feet must be installed on the panel legs. If the rubber feet are not installed, the metal legs will scratch the basin surface.

- Place the panel in the sink basin. The panel's feet will sit in the basin's grooves, centering the panel in the basin.
- Make the final drain and faucet connections to complete the lavatory installation. Be sure to follow the instructions packed with the drain and faucet.
- Clean up with a **non-abrasive** cleaner.

USA: 1-800-4-KOHLER  
Canada: 1-800-964-5590  
Mexico: 001-877-680-1310  
[kohler.com](http://kohler.com)

THE BOLD LOOK  
OF **KOHLER**®

© 2003 Kohler Co.

1020957-2-A